



Many different case sizes and adapter plates are available for adaptive customization with your protective device. These accessories aid in the installation and testing of protective devices.

### RELAY TYPES

	Case	Model No.	Relay Type	Bulletin
Numeric Relays and Systems	H,J	BE1-11 <i>f</i>	Feeder Protection System	URH
	H,J	BE1-11 <i>g</i>	Generator Protection System	URJ
	H,J	BE1-11 <i>i</i>	Intertie Protection System	URI
	J	BE1-11 <i>m</i>	Motor Protection System	URL
	J	BE1-11 <i>t</i>	Transformer Protection System	URN
	S	BE1-GPS100	Generator Protection System	UHQ
	MX	BE1-1051	Overcurrent Protection System	UHS
	S	BE1-951	Multifunction Protection System	UHR
	F,H,S	BE1-851	Overcurrent Protection System	UHM
	H	BE1-851E	Enhanced Overcurrent Protection System	UHW
	X	BE1-700C	Digital Overcurrent Protective Relay	URDC
	X	BE1-700V	Digital Voltage/Frequency Protective Relay	URDV
	L,MX	BE1-CDS240	Current Differential Protection System	UHT
	MX	BE1-CDS220	Current Differential Protection System	UHP
S	BE1-IPS100	Intertie Protection System	URB	
Protective Relays	S	BE1-25	Sync-Check	UBP
	S	BE1-27	Undervoltage	UBF
	S	BE1-27/59	Over/Undervoltage	UBF
	M,S	BE1-320/U	Directional Over/Underpower	UBU
	M,S	BE1-32R	Directional Power	UBU
	S	BE1-40Q	Loss of Excitation	UBW
	S	BE1-46N	Negative Sequence Overcurrent	UDJ
	S	BE1-47N	Negative Sequence Voltage	UDK
	S	BE1-50	Instantaneous Overcurrent	UBC
	S	BE1-50BF	Breaker Failure	UBT
	A,S,B	BE1-50/51B	Time Overcurrent	UHD
	C	BE1-50/51M	Time Overcurrent	UHE
	P	BE1-BPR	Breaker Protection	UHG
	S	BE1-51	Time Overcurrent	UDA
	S	BE1-51/27C	Time Overcurrent with Voltage Control	UDA
	S	BE1-51/27R	Time Overcurrent with Voltage Restraint	UDA
	S	BE1-59	Overvoltage	UBF
	S	BE1-59N	Ground Fault Overvoltage	UBG
	S	BE1-59NC	Capacitor Neutral Overvoltage	UHF
	S	BE1-60	Voltage Balance	UBS
	T	BE1-64F	Ground Fault	UHU
	M	BE1-67	Phase Directional Time Overcurrent	UDQ
	M	BE1-67N	Ground Directional Time Overcurrent	UDR
	S	BE1-79A	Retrofit Reclosing	UHN
	S	BE1-79M	Multiple-Shot Reclosing	UDL
	M,S	BE1-810/U	Digital Frequency	UBR
	M,S	BE1-87B	High Impedance Bus Differential	UHC
	S	BE1-87G	Variable Percentage Differential	UBK
	M	BE1-87T	Transformer Differential	UHA
	R	BE1-25A	Automatic Synchronizer	UIM

### RELAY ADAPTER PLATES AND MOUNTING KITS


Basler Part Number	Description
9424200073	BE1-11 J case retrofit mounting plate for Multilin 469, 750/760, 345/745, 489, 735/737
9424200074	BE1-11 <i>m</i> retrofit mounting plate for Multilin 369/269
9424200075	BE1-11 <i>m</i> mounting plate for drawout Multilin 269
9289900016	Adapter plate to panel mount two dovetailed H case relays
9289900017	Adapter plate to panel mount one H case relay
9289924100	Adapter plate to mount one H case relay into 19" rack
9289929100	Adapter plate with cutout for ABB FT test switch, to mount one H case relay into 19" rack
9108551021	Adapter plate to mount S1 case into GE S2 or Westinghouse FT-21 cutout
9108551022	Adapter plate to mount S1 case into Westinghouse FT-31/FT-32 cutout
9108551029	Adapter plate to mount S1 case into GE M1/M2 cutout or Basler M1 cutout
9108551037	Adapter plate to mount S1 case into GE L1/L2 cutout
9108559100	Adapter plate to mount two S1 cases into 19" rack, side by side (Includes a blank S1 plate for one side)
9108559101	Adapter plate to mount one S1 case and one M1 case side by side (Includes a blank S1 plate)
9108559102	Adapter plate to mount two M1 cases side by side (Includes a blank M1 plate)
9289900037	Adapter plate to mount one BE1-11 <i>g</i> (H case) into BE3-GPR cutout
9252017005	Adapter plate to mount one BE1-50/51-244 into FT-21 cutout
9146646001	Adapter plate to panel mount one BE1-25A relay
9272013101	Adapter plate to panel mount one horizontal BE1-BPR relay
9252012001	19" rack-mounted plate for mounting four vertical BE1-50/51M units
9108559104	Blank cover plate assembly for an S1 cutout
9108559105	Blank cover plate assembly for an M1 cutout
9424226101	Pivoting projection-mounting kit for a J case
9289911026	Projection-mounting kit for an S1 case
9289911027	Projection-mounting kit for an F1 case

#### Case Size Codes:


A=A1, B=FT11, C=C1, F=F1, H=H1, J=Panel Mount S1 Size, L=L2, M=M1, MX=M1/rack, R=19" rack, S=S1, T=Compact Drawout, X=Panel Mount

VISIT [WWW.BASLER.COM](http://WWW.BASLER.COM)  
FOR ADDITIONAL INFORMATION AND  
STYLE CONFIGURATION TOOL.


RELAY CASES

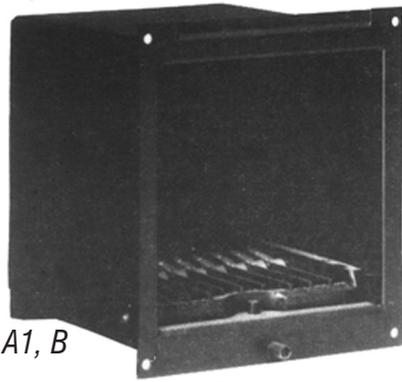

A1, B

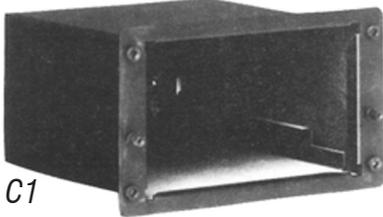


C1

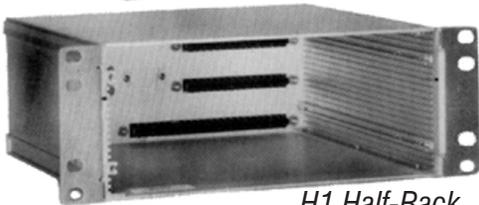


H1 Half-Rack




19" Rack

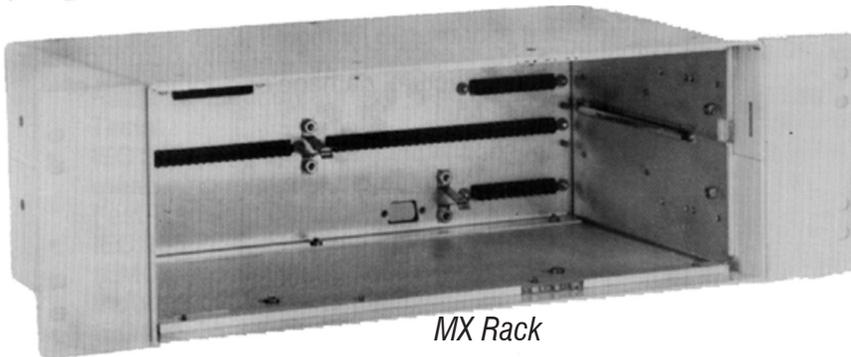

MX Rack

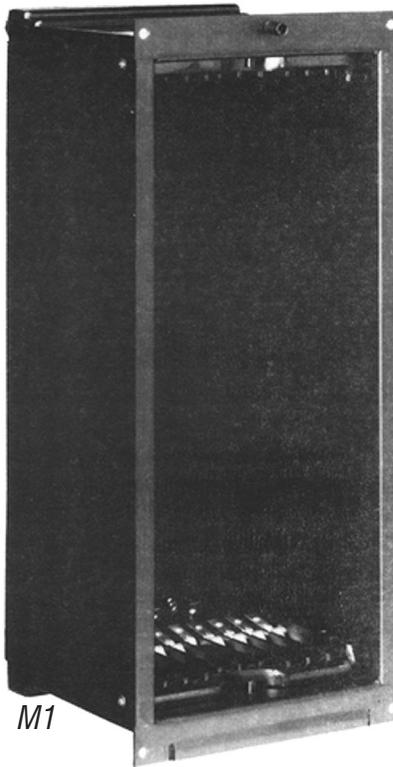


M1

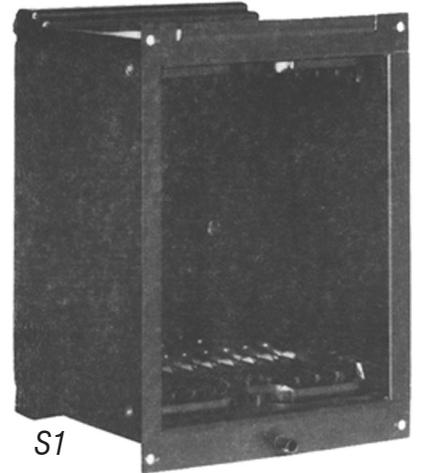

S1



J

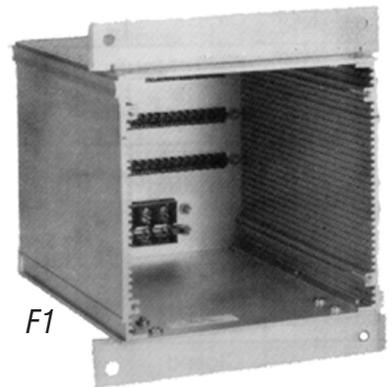

F1



Test Plug

**Test Plug**

A test plug (Basler part number 10095) provides a quick, easy method of testing drawout case type relays directly in the case. Insertion of the test plug enables the user to access both external stud connections and internal relay connections.



RTD Module



ISO 9001-2008/2000  
Highland, IL USA Wasselonne, France  
Taylor, TX USA Suzhou, China



12570 State Route 143, Highland, Illinois 62249-1074 USA  
Tel +1 618.654.2341 Fax +1 618.654.2351  
email: info@basler.com www.basler.com

P.A.E. Les Pins, 67319 Wasselonne Cedex, FRANCE  
Tel +33 3.88.87.1010 Fax +33 3.88.87.0808  
e-mail: franceinfo@basler.com

No. 59 Heshun Road Loufeng District (N),  
Suzhou Industrial Park, 215122, Suzhou, P.R.China  
Tel +86(0)512 8227 2888 Fax +86(0)512 8227 2887  
e-mail: chinainfo@basler.com

111 North Bridge Road #15-06 Peninsula Plaza  
Singapore 179098  
Tel +65 68.44.6445 Fax +65 68.44.8902  
e-mail: singaporeinfo@basler.com